BOSE® SoundDock®

DIGITAL MUSIC SYSTEM

Owner’s Guide

Brugervejledning

Bedienungsanleitung

Guía de usario

Notice d’utilisation

Manuale di istruzioni

Gebruiksaanwijzing

Bruksanvisningen

®

IMPORTANT SAFETY INSTRUCTIONS

Please read this owner's guide

Please take the time to follow the instructions in this owner's guide carefully. It will help you set up and operate your system properly and enjoy all of its advanced features. Please save this owner's guide for future reference.

WARNING: *To reduce the risk of fire or electrical shock, do not expose the product to rain or moisture.*

WARNING: *The apparatus shall not be exposed to dripping or splashing, and objects filled with liquids, such as vases, shall not be placed on the apparatus. As with any electronic product, use care not to spill liquids into any part of the system. Liquids can cause a failure and/or a fire hazard*

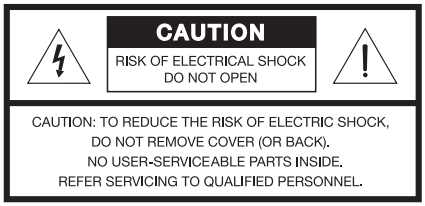
CAUTION
RISK OF ELECTRICAL SHOCK
DO NOT OPEN
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER (OR BACK).
NO USER-SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED PERSONNEL.

AVIS
RISQUE DE CHOC ÉLECTRIQUE
NE PAS OUVRIR
ATTENTION : POUR RÉDUIRE LE RISQUE DE DÉCHARGE
ÉLECTRIQUE, NE RETIREZ PAS LE COUVERCLE (OU
L'ARRIÈRE). IL NE SE TROUVE À L'INTÉRIEUR AUCUNE
PIÈCE POUVANT ÊTRE RÉPARÉE PAR L'USAGER.
S'ADRESSER À UN RÉPARATEUR COMPÉTENT.

The lightning flash with arrowhead symbol, within an equilateral triangle, alerts the user to the presence of uninsulated dangerous voltage within the system enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

The exclamation point within an equilateral triangle alerts the user to the presence of important operating and maintenance instructions in this owner's guide.

WARNING: *No naked flame sources, such as lighted candles, should be placed on the apparatus.*

Note: *The product label is located on the bottom of the product.*

This product is intended to be used only with the power supply provided. Where the mains plug is used as the disconnect device, such disconnect device shall remain readily operable.

This product must be used indoors. It is neither designed or tested for use outdoors, in recreation vehicles, or on boats.

WARNING: *Keep the remote control battery away from children. It may cause a fire or chemical burn if mishandled. Do not recharge, disassemble, heat above 100º C (212º F), or incinerate. Dispose of used batteries promptly. Replace only with a battery of the correct type and model number.*

WARNING: *Danger of explosion if battery is incorrectly replaced. Replace only with Duracell, Eveready, Energizer, Maxell, Toshiba, or Shun Wo CR2032 or DL2032 3-volt lithium battery.*

Please dispose of used batteries properly, following any local regulations. Do not incinerate.

CE This product conforms to the EMC directive 89/336/EEC and to the Low Voltage Directive 73/23/EEC. The complete Declaration of Conformity can be found on www.bose.com.

The SoundDock® digital music system is compatible with the iPhone and most iPod models, including the iProd touch and any iPod featuring a click wheel, including nano, mini, photo, video and classic models.

SoundDock and the SoundDock system design are registered trademarks of Bose Corporation in the U.S. and/or other countries.
iPod is a trademark of Apple Inc., registered in the U.S. and other countries. iPhone is a trademark of Apple Inc. All other marks are property of Bose Corporation.

"Made for iPod" means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.

"Works with iPhone" means that an electronic accessory has been designed to connect specifically to iPhone and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

Important Safety Instructions

1. **Read these instructions –** for all components before using this product.
2. **Keep these instructions –** for future reference**.**
3. **Heed all warnings –** on the product and in the owner's guide.
4. **Follow all instructions.**
5. **Do not use this apparatus near water or moisture –** Do not use this product near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, near a swimming pool, or anywhere else that water or moisture are present.
6. **Clean only with a dry cloth –** and as directed by Bose Corporation. Unplug this product from the wall outlet before cleaning.
7. **Do not block any ventilation openings. Install in accordance with the manufacturer's instructions –** To ensure reliable operation of the product and to protect it from overheating, put the product in a position and location that will not interfere with its proper ventilation. For example, do not place the product on a bed, sofa, or similar surface that may block the ventilation openings. Do not put it in a built-in system, such as a bookcase or a cabinet that may keep air from flowing through its ventilation openings.
8. **Do not install near any heat sources, such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.**
9. **Only use attachments/accessories specified by the manufacturer.**
10. **Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.**
11. **Use only with the cart, stand, tripod, bracket or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.**

12. **Unplug this apparatus during lightning storms or when unused for long periods of time –** to prevent damage to this product.
13. **Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way: such as power supply cord or plug is damaged; liquid has been spilled or objects have fallen into the apparatus; the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped –** Do not attempt to service this product yourself. Opening or removing covers may expose you to dangerous voltages or other hazards. Please call Bose to be referred to an authorized service center near you.
14. **To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords, or integral convenience receptacles.**
15. **Do not let objects or liquids enter the product –** as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock.
17. **See product enclosure for safety related markings.**
18. **Use proper power sources –** Plug the product into a proper power source, as described in the operating instructions or as marked on the product.

Information about products that generate electrical noise

If applicable, this equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, this is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a different circuit than the one to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This product complies with the Canadian ICES-003 Class B specification.

SOUNDDOCK® DIGITAL MUSIC SYSTEM

How this system takes your iPod or iPhone sound public

Congratulations on your choice of the SoundDock® digital music system from Bose.

Designed specifically to work with your iPod/iPhone, this system provides high-quality audio performance that invites your music to come out and play. Don't be surprised if it attracts a wide audience of people who love the sound.

With the SoundDock digital music system, you get:

- a credit card-sized remote to control system volume and basic iPod/iPhone functions from almost anywhere in the room
- control of your iPod/iPhone while it is docked in the system
- Compatible with the iPhone and most iPod models, including the iPod touch and any iPod featuring a click wheel, including nano, mini, photo, video and classic models.
- recharging of the battery while your iPod/iPhone is docked in the system

Unpacking and setting up

Check the carton for all of the parts shown (Figure 1).

Save the carton for possible future use. It provides the best means to repack the system for transporting it outside your residence.

Figure 1

Carton contents

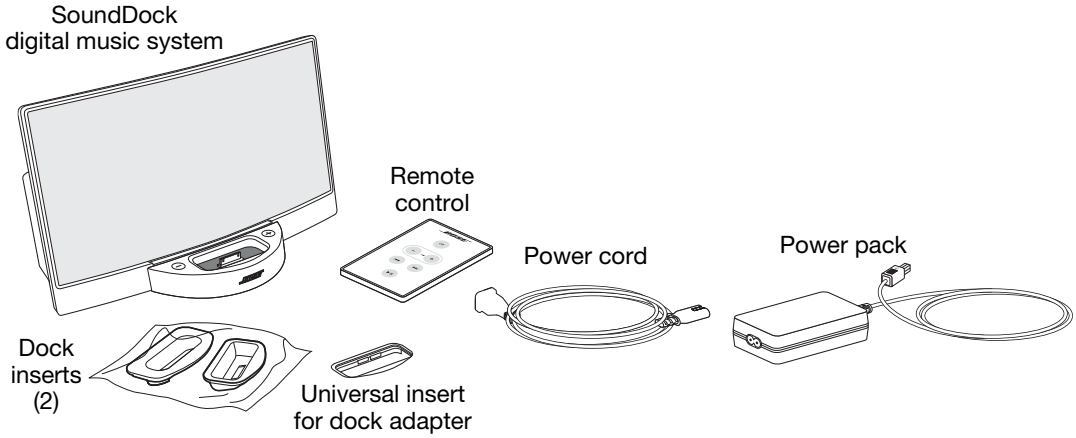

Place the system on a firm and level surface. Its speaker drivers are shielded, which limits the possibility of video interference if it is placed near a computer or video screen.

Selecting the correct insert

Before you enjoy the sound, you need to install the proper insert in the dock. You can use one of the inserts that come with your SoundDock® system or you can use the supplied Universal insert for dock adapter, which makes an Apple® dock insert work with your SoundDock® digital music system. Use the chart included in the carton to determine which insert or adapter you can use with your iPod/iPhone.

Using the supplied inserts

To install the proper insert:

1. Refer to the chart included in the carton and locate your iPod/iPhone model and the mark that indicates which insert it works with.
2. Position the selected insert over the dock.
3. Press on both sides of the insert until it sits firmly in place (Figure 2).

Figure 2

Installing an insert

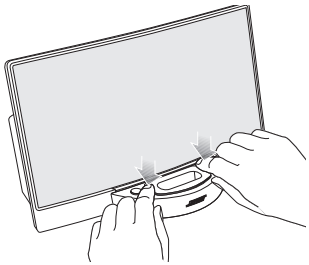

Note: *You can remove and replace this insert with one of the others that are provided. This allows you to use the system with iPod models of different sizes. For details, see "To remove an insert from the dock" on page 9.*

Using the Universal insert for dock adapter

To use the Universal insert for dock adapter with an Apple insert (Figure 3):

1. Press the Universal insert for dock adapter into the dock.
2. Insert the iPod insert that came with your iPod.

Figure 3

Installing the Universal insert for dock adapter with Apple dock insert

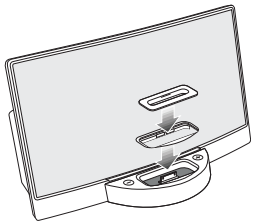

Connecting to power

With the proper insert installed, you can now plug in the system.

1. Line up this arrow with the one on the back of the system as you insert the connector into the jack.
2. Insert the small connector end of the power cable into the jack on the power pack.
3. Plug the other end of this cable into a wall outlet.

Figure 4

Plugging in the system

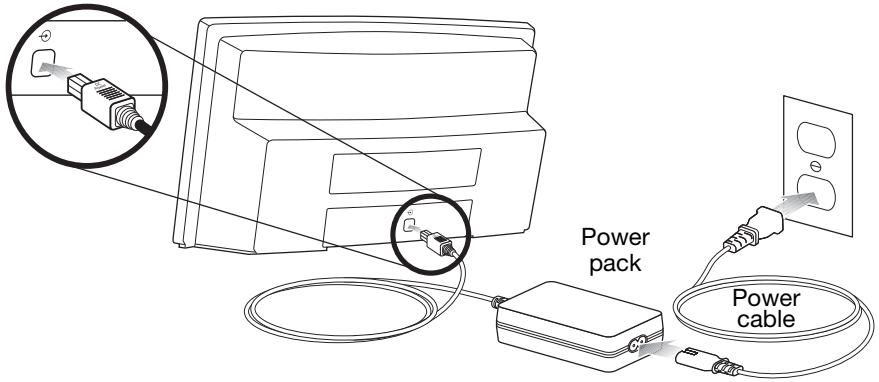

To check for iPod/iPhone compatibility

For the SoundDock® system remote control to work as expected, your iPod/iPhone must have the latest version of software installed. To check the software version your iPhone is currently running, select Settings, General, About, Version on the iPhone display.

If you need to upgrade, simply visit the Apple website (www.apple.com) and follow the instructions there for a free download.

Using the system

Your SoundDock® digital music system is ready to go as soon as you plug it in. Simply set your iPod/iPhone to play what you want and insert it into the dock on the front of the system (Figure 5).

Figure 5

Volume controls and iPod/ iPhone dock

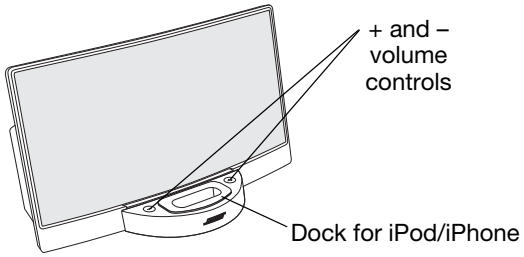

- You should hear the music immediately. If you do not, refer to “Reference” on page 10.
- The + and – buttons on either side of the dock (above) allow you to adjust the system volume.
- Whenever your iPod/iPhone is docked in the system, it recharges (until fully charged).

Note: *When earphones are plugged into your iPod/iPhone, sound comes from both the earphones and the system.*

Taking control

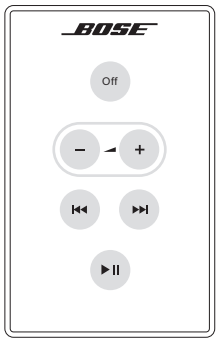

Use the remote to control the sound as you move around the room.

- Press Off once to turn off your iPod/iPhone.
  It continues charging while in the dock.
- Turn on your iPod/iPhone and press – + to adjust the system volume.
  Press and hold for faster adjustment.
- Press ⏮ once to return to the beginning of the current track or twice to skip to the beginning of the previous track. Press and hold to scan backward quickly through a track.
- Press ⏭ once to skip to the next track. Press and hold to scan forward quickly through a track.
- Press ⏯ once to pause play; again, to resume it.
  Press and hold to turn off your iPod/iPhone.

Using your iPod or iPhone:

- iPod/iPhone navigation controls are fully functional while your iPod/iPhone is docked in the system.
- The iPod click wheel changes the headphone volume only. It has no effect on the SoundDock system volume.
- The iPhone volume control changes the headphone volume only. It has no effect on the SoundDock system volume.

Maintaining the system

Changing the remote control battery is the only regular maintenance that is required. You may also clean the system as needed.

Battery replacement

- Replace the remote control battery when it stops operating (normally every year or two), or its range seems reduced.
- Use only a Duracell, Eveready, Energizer, Maxell, Toshiba, or Shun Wo CR2032 or DL2032 3-volt lithium battery.
- Keep in mind that lighting and other room conditions, in addition to battery age, can affect the operating range of an infrared remote control.

Figure 6

Inserting a new battery

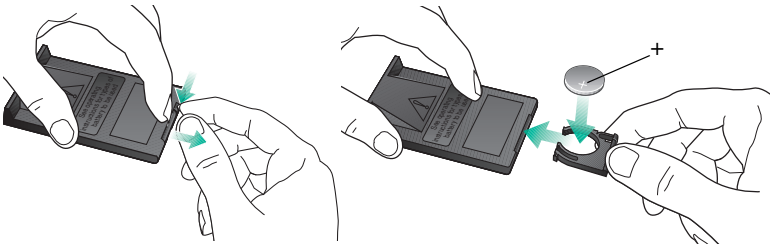

To clean the system

Wipe the system using a soft dry cloth. You can also lightly vacuum the grille.

- Do not use solvents, chemicals, or sprays.
- Do not allow liquids to spill or objects to drop into any openings.

To remove an insert from the dock

1. With your thumbs on the front of the dock near the Bose® logo, and your index fingers inside it, pinch until the rear of the insert lifts up (Figure 7).
2. Lift out the insert and replace it with the one you need.

Figure 7

Removing an insert

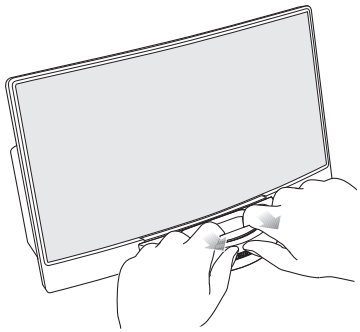

REFERENCE

Troubleshooting

Problem	***What to do***
Your iPod/iPhone does not dock properly	• Make sure the dock insert is the proper fit for your iPod/iPhone model (refer to “Selecting the correct insert” on page 5). • Remove your iPod/iPhone from the dock and check for obstructions on the connectors in the dock and on your iPod/iPhone. Then reseat it in the dock.
No sound	• Make sure the system is plugged in, your iPod/iPhone is turned on, and a music track is selected and playing. • Press the Play/Pause button on the remote control. • Increase the volume setting for the system. • Remove your iPod/iPhone from the dock, wait briefly, then reseat it. You may need to do this a few times. • Make sure your iPod/iPhone is running compatible software (refer to “To check for iPod/iPhone compatibility” on page 6).
No sound *and* your iPod/iPhone is not charging	• Make sure the power cable is securely plugged into a functioning wall outlet and the symbol on the small connector is matched to the one on the back of the SoundDock® system. Refer to Figure 4 on page 6. • Make sure your iPod/iPhone is firmly seated in the dock.
No sound after quickly undocking or docking your iPod/iPhone	• Remove your iPod/iPhone from the dock, wait 5 seconds, and return it to the dock. • Unplug the power cable for 1 minute, then plug it back in. This resets the system.
Your iPod/iPhone does not respond to the SoundDock® remote control buttons shown: ⏮ ⏭ ⏯	• Remove your iPod/iPhonefrom the dock, wait briefly, then reseat it. You may need to do this a few times. • Try the remote from a different location. If it works there, strong lighting or other room conditions may be causing the problem. • Make sure nothing blocks the infrared (IR) signal path from the remote to your SoundDock system. Wipe off the small lens on the front end of the remote. • Check the battery to make sure the + side is up as shown in Figure 6 on page 8. • Replace the remote control battery. • Make sure your iPod/iPhone is running compatible software (refer to “To check for iPod/iPhone compatibility” on page 6).
Your SoundDock system does not respond to its remote commands or to the + and – volume buttons on the front of the system	• Unplug the power cable for 1 minute, then plug it back in. This resets the system. • Contact Bose® Customer Service about the problem.



iPod compatibility

If your iPod has four buttons above the touch wheel (3rd generation with dock connector), it is not compatible with the SoundDock digital music system. You can listen to this model iPod when it is docked, but it (the iPod) will not charge.

Customer Service

For questions about the SoundDock digital music system, contact your local Bose dealer. To contact Bose directly, see the address list included in the carton.

Warranty

Your SoundDock digital music system is covered by a transferable limited warranty. See your product registration card for details.

Please be sure to fill out the information section on the card and mail it to Bose. Or, to register online, select Product Registration at the bottom of the Customer Service page of our website:

www.Bose.com

Technical Information

Power rating

100-240V~ 50-60Hz, 1.5A-0.8A, 64-77VA

System size and weight

6.65"H x 11.91"W x 6.48"D
(16.89 cm x 30.26 cm x 16.47 cm)
4.56 lb (2.1 kg)

BOSE®
Better sound through research®

©2009 Bose Corporation, The Mountain,
Framingham, MA 01701-9168 USA
AM315089 Rev.01